

## USER'S MANUAL



**NOTE:** For Spanish users, please go to "Settings", then go to "Language & Input" to change from English to Spanish Language OSD.

### 10" CyberPad Tablet PC

To assure the product to work in best status please read the users manual carefully before operation and keep it well for future use



Thank you for purchasing iVIEW products, for more information or to purchase new products, visit us on ***WWW.IVIEWUS.COM*** or call: **(909) 627-9888**.



iVIEW-977TPC  
(9.7" Tablet with Quad Core)



iVIEW-975TPC  
(9.7" Tablet with Dual Core)



iVIEW-900TPCII  
(9" Tablet PC)



iVIEW-800TPC  
(8" Tablet with Dual Core)



iVIEW-796TPC  
(7" Tablet PC with Phone)



iVIEW-777TPC  
(7" Tablet with Dual Core)



iVIEW-757TPC  
(7" Tablet PC)

 


iVIEW-754TPC  
(7" Tablet PC)





**iVIEW-500TPC**  
 (5" Tablet with Phone)



**Cyber Dongle**



**iVIEW-1010 NBII**  
 (10" Netbook)



**iVIEW-706NB**  
 (7" Netbook)



**iVIEW-980PDVX**  
 (9" Portable DVD)



**iVIEW-3500STB**  
 Converter Box



**iVIEW-HFR2-SU3**  
 (eSata 4 Bay Enclosure)



**iVIEW-1000KOD**  
 Karaoke on Demand

---

iVIEW's new 10" CyberPad 1030 TPC Tablet PC is the next generation of mobile internet device, providing access to the web, customization through Android Apps, and viewing of multimedia content. You are able to access easily and download thousands of Apps from the Android Play Store and the King Kong Apps Market to tap your need, such as news, weather, or local business info, enjoying your favorite movie clips, watching some YouTube videos, playing games, or just kicking back and listening to some music, working on the get-go with Office productivity software. With built-in DDR3 of 1GB, 10" CyberPad speed is faster than most of the tablet pc in the market and with memory of 8GB, you may store plenty of pictures, movies, and documents. Expansion storage is available via Card Reader slot, up to 32GB. iVIEW- 1030 TPC is your all-in-one tablet that you can't live without.

#### **Notes:**

- \* This is a high-density electronic product; please do not dismantle it by yourself.
- \* Avoid strong beat and collision.
- \* Avoid using this product in the following environments: High and low temperature, humidity, dusty, with strong magnetic and long-term exposure to the sun.
- \* Wipe the product shell by using dry wet cotton cloth gently; the use of other chemical cleaning is prohibited. This product should keep away from water drop and water splash, so cups filled with liquids should not be placed near the product.
- \* Use the headset long time, high volume may cause permanent damage to hearing.
- \* Do not use headphones when going across a road, driving a motorcycle or bicycle, in order to avoid traffic accidents.
- \* Please use permitted battery, charger and accessories only, the use of any other type of product would be a breach of warranty regulations, and may be dangerous.
- \* Please deal with waste machinery and accessories according to local environmental regulations.
- \* If you have any questions in the process of using of the product, please contact the local dealer or contact Wiltronics customer service center directly.
- \* For the smeared memory loss that is caused by product damage, repair or other causes of product damage, repair, the company is not responsible for it, so please follow the user's guide and timely backup.

---

# Content

1.Appearance and button.....	2
2. First use .....	4
3.Equipment operation interface .....	9
4.Equipment basic set .....	13
4.1 WIFI .....	13
4.2 Brightness.....	15
4.3 Install, uninstall,run the application.....	15
4.4 Backup & reset .....	17
4.5Language & keyboard.....	18
4.6 Time/Date setting.....	19
5. File Manager .....	20
6 Network.....	22
7 Music playback .....	24
8 Video playback.....	25
9 Photo browse.....	26
10 Wallpaper .....	27
11 Record .....	28
12 Photograp .....	28
13 E-mail .....	29
14 Keyboard and mouse .....	30
Features.....	31

Thank you for purchasing iView products,  
for technical support or more information  
please visit us on **WWW.IVIEWUS.COM**  
or CALL US at **(909) 627-9888**

# 1. Appearance and button



## 1.1 Touch panel

10" Capacitive touch panel: During the operation, you can click and drag items on the touch panel.

---

## 1.2 POWER

To power on: Press and hold the power button, the system will enter the main interface.

To power off: In the main menu interface, press the power button for about 5 seconds to power off, the system will appear "power off" option, click "ok" and you can safely power off.

Lock screen: Press power button to lock screen or unlock screen.

Remark】 : When the power ran out, the system will power off automatically.

## 1.3 Volume +, Volume-

The buttons Volume +/Volume located on the side of the tablet which allow to adjust volume.

## 1.4 Earphone jack

3.5 mm standard earphone jack.

## 1.5 Card Reader

Video output interface.

## 1.6 Micro SD card

Card Reader Slot: External micro SD card.

## 1.7 USB

USB jack: you can use it to connect the computer for data transmission, charging and external connection USB flash drive.

## 1.8 Reset

When the tablet fails to respond when buttons are pressed, using a thin small object (such as a paperclip) to press RESET button, the tablet will force to reset.

---

Remark : Unless it's unable to power off by normal procedure, otherwise don't use the reset option.

## 2. First use

---

### 2.1 Battery management and charge

- Before first use, please charge the battery until the battery is full.
- You can charge thru the adaptor or USB cable, for the first time, please charge about 6 hours.
- When finished charging, battery icon will become green and stop rolling. in order to prolong the service life of the machine, it's suggest to use all the battery power before charging it.

Remark 1 :

1. If you don't use this tablet for a long time, in order to avoid power consumption caused damage, pls charge the battery once a month.
2. When battery ran out, it will show "battery low" after you connect adaptor and it will take some time until the battery have enough power to power on.
3. Battery charging should be in standby status for reach normal charging time.


### 2.2 Start-up and shut-down:

Startup: To press the power key and the system will enter the process of Start-up, as shown below:


Startup Logo, in the process of startup



 Then the system enters the default home interface.

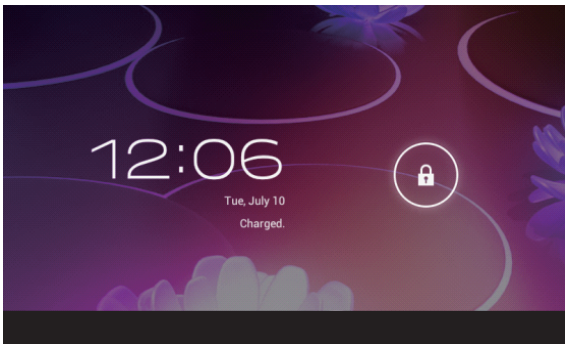

 Shutdown: Press the power key then pop-up options will be on the desktop, choose the option of Power off as shown below.

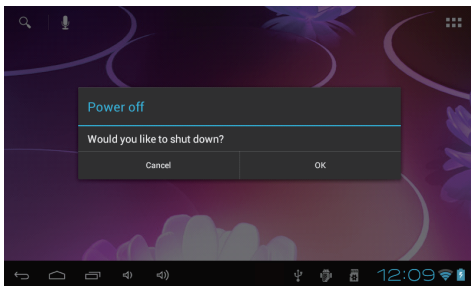

Click OK to shutdown

**Sleep:** In the normal state operation of the machine, press the power button, enter a state of dormancy, at this time, the screen will be closed. Another short press on the power button will resume to normal mode. When CyberPad is not in use you can start this function to reduce power consumption.

## 2.3 Desktop

After the normal startup of the system is completed, you can see the Android 4.0 desktop (below). The default desktop is consisted of quick search bar, status bar, and menu label icon.





---

The status bar is used to display the network status of current system, battery power, time and other information.

Quick search box is used by the typing keywords to do the Internet search. The main menu tag is in the right middle side of the screen, click it and the default menu bar can be expanded.

## 2.4 Buttons

Keys used in Android systems process:

The volume keys: Volume+, Volume- in the taskbar can be used for Volume change.

The power button: Press long time for switching machine. Press quickly to enter or leave the state of dormancy.

Menu key: Return or select the main interface.

 
Return key: Return to the last interface .

## 2.5 Connection with PC


You use USB cable to connect device to PC, device will pop up the USB connection window, click "Turn on USB storage to connect to PC, Into the load mode, you can copy, delete the file on the device and the file on the memory card.

To view files on your MID, Please operate as below:


1. Connect your MID to your computer using the USB cable.
2. On the home screen, Touch **Notifications**, touch **USB connected**.
3. Touch **Turn on USB storage**.

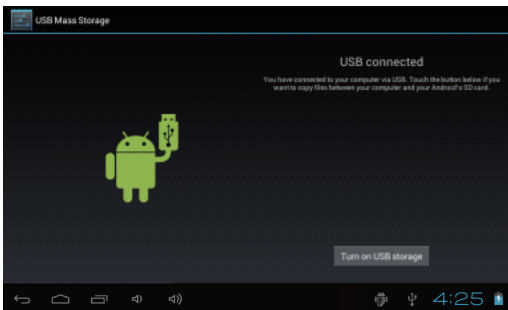

 4. On your computer, go to the **Removable Disk** folder.
5. Locate the files on the computer that you want to copy to your MID.
6. Copy and paste files to the desired location in the **Removable Disk** folder.
7. Turn off USB Storage. As shown in the below picture.

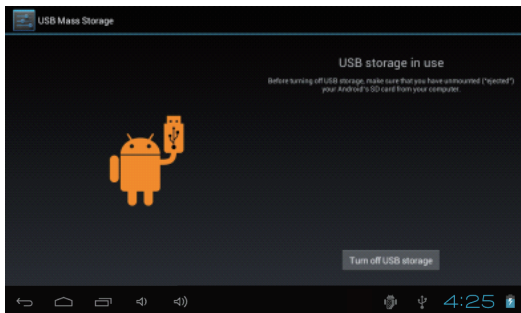

 8. Then touch SD, you will see the copy content from computer to device, just like the information as below :

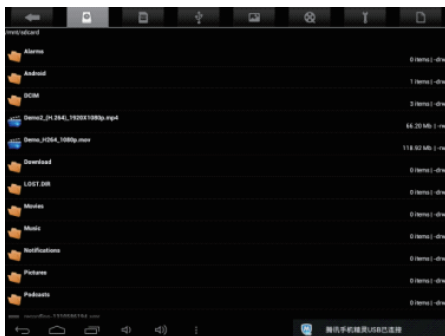

## 3. Equipment operation interface


### 3.1 Main interface Description

After power on, you will enter the main interface.




**In the main interface, you can :**

**Management of main interface software ICONS:** Management of main interface software ICONS: Press and hold the icons for 3 seconds, after the icons become bigger, then you can drag anywhere in the interface.

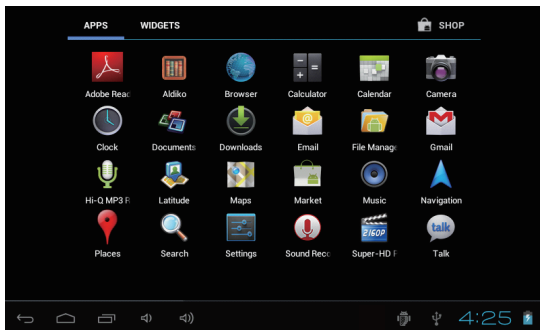 


**Delete icons:** Press and hold the icons for 3 seconds, drag the icons to the Recycle Bin icon, then release your finger from the screen.

  **Replace wallpaper:** Press and hold anywhere on the main screen, the option "Choose wallpaper from" will appear as shown below.

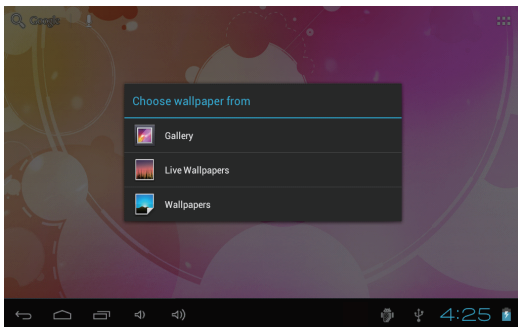





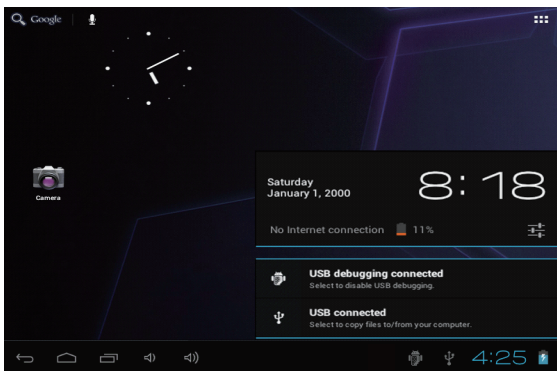







### 3.2 Status bar description

When you see a notification in the status bar, tap the bar and slide your finger up the screen to open the list of notifications. As s shown below:





Icons of Status Bar:

 
	Newe-mail message		Downloading
	Upcoming event		Content downloaded
	Song is playing		Alarm is set
	USB connected		Wi-Fi service connected
	Battery is charging		Warning
	Volume reduction		Volume increase

### 3.3 Use touch panel

Device equipped with a 10" touch screen. Following the main touch screen area is described, and describes some of the tips for how to use the touch screen.

No matter which interface you are on the screen, cyou an go back to main screen through pressing the soft key  on the bottom right corner of the main screen.

Corner on the touch screen, you can return to its interface on the up level. In different applications, by tapping the menu key  on the upper right corner of touch screen, the screen will appear the operation setting interface as follows,

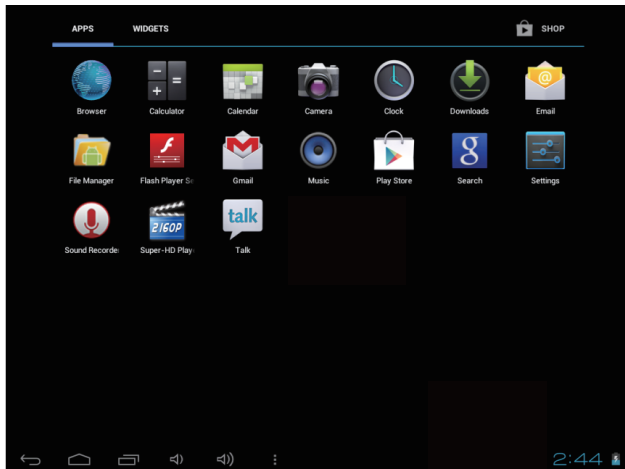


In the main interface, you can touch the icon to open the APPs

In different browser(file, music, video, pictures), You shift and drag the scroll bar, so that the file list can up or down to roll.

## 4. Equipment basic setting




 Setting: Click setting icons , enter setting interface

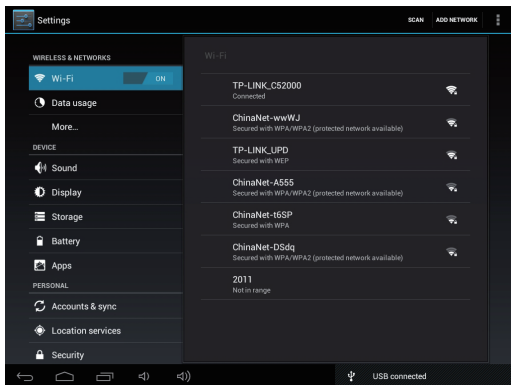


### 4.1 Wi-Fi

 Click on the "Settings" icon in the main menu, click on the "wireless and network" into the " wireless and network" settings. Click on the "WIFI" column and WIFI function can be started at once. Click "WIFI settings" column can enter "WIFI setting interface", as shown below:

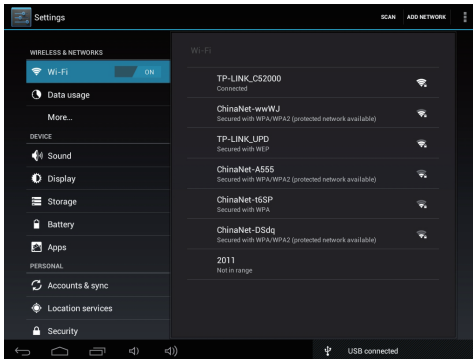

In the WIFI" interface(Pictured above), by clicking on the WIFI column you can open and close the WIFI function. Click "network notification" to list the wireless router that is searched by Cyberpad .Click the searched wireless router and setup window will pop-up. follow the prompts to complete the WIFI network links.

 
After you connecting WI-FI as shown above, the folbwing image will appear:

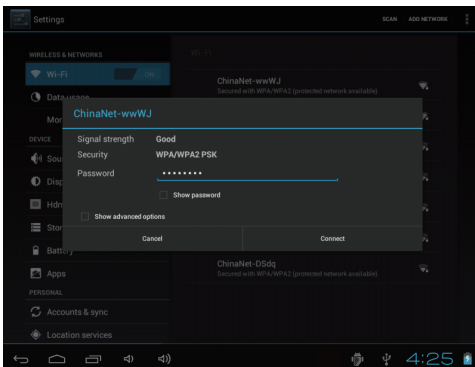




## 4.2 Brightness:

 
In the setting of the interface to select "display settings" into the display settings interface,select "Brightness" in drop-down lists as appeared in the following dialogue.

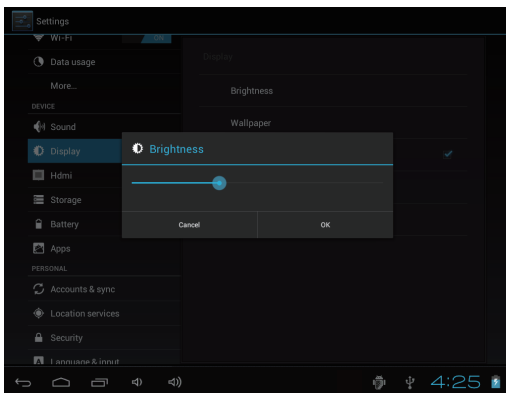


## 4.3 Install, uninstall, run the application

 
Android installation: There are a variety of ways to install applications, for example, you can click on the Apk file directly and it will automatically be installed. In case there are third party programs, the system may identify it as unsafe and will need the following procedures for installation with the assistance of the application.

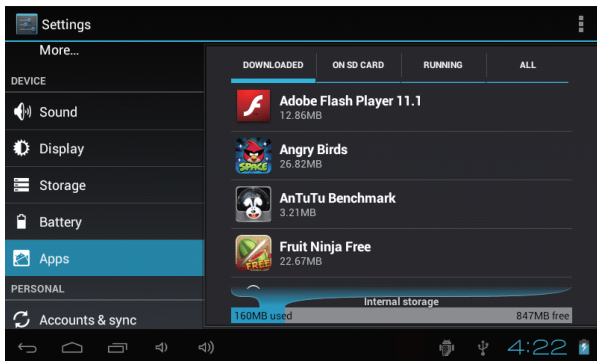

 1. Enter  "setting">"Application">"Manage application" And then there will be installed program list
2. Click uninstall icon, then you can uninstall the application

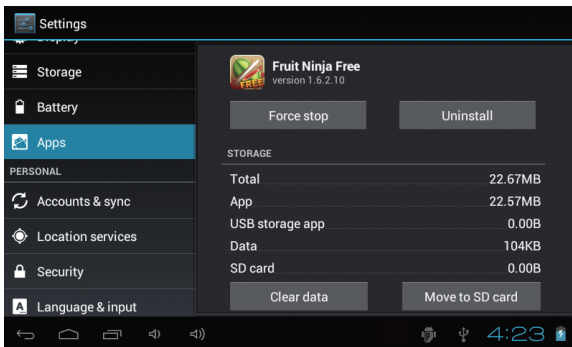


 3. Press "Unknown sources" and then "OK" the following image will appear.

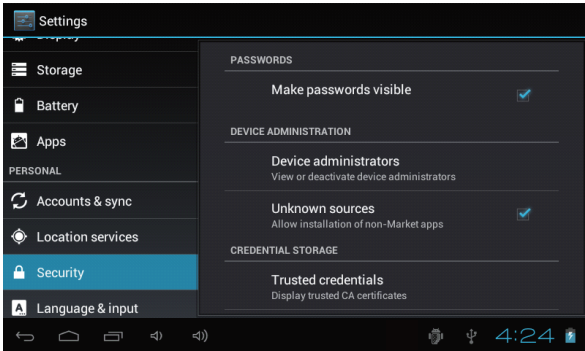


## 4.4 Backup Reset
 
### Factory data reset

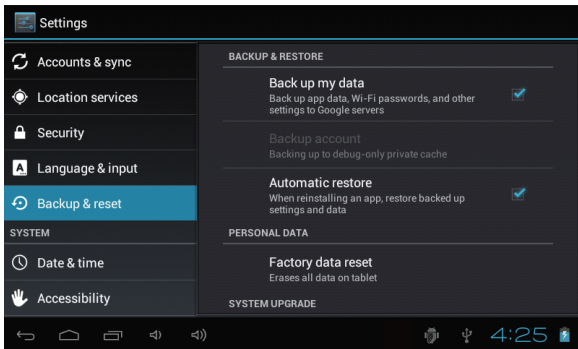

## 4.5 Language & keyboard

 Setting: (Language), text input and automatic error correction options;

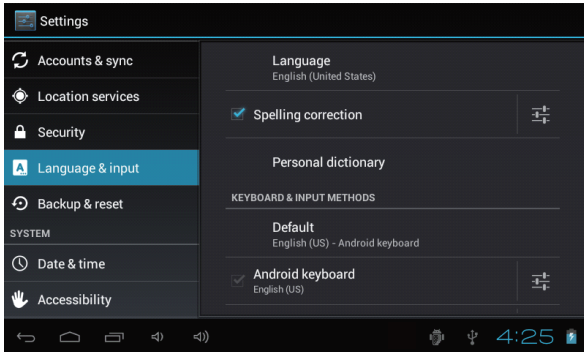

Select Language: 14 kinds of national languages are available.

Remark: Android system can support 54 kind of language, now manu interface just suport 14 language.

Android keyboard: Android keyboard setting


Sound on Key-press

Auto-capitalisation

Show suggestions: Display suggested words while typing

Auto-complete: Specebar and punctuation automatically insert highlig.

## 4.6 Date & time setting

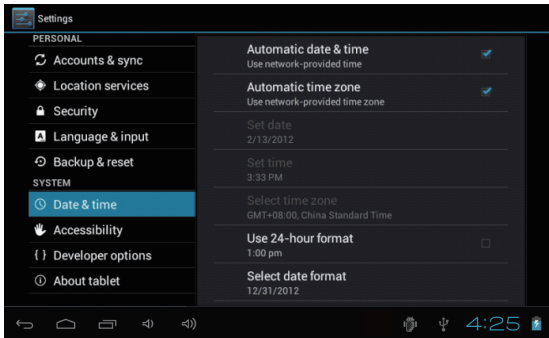 


In the interface of the setting, select "the time and date settings" to enter the date and time settings interface:

You can choose the automatic mode by using the network time .

You also can choose to set the date, select time zone, set time, select date format, set date and other information

 For example, choose the set date , as shown below:

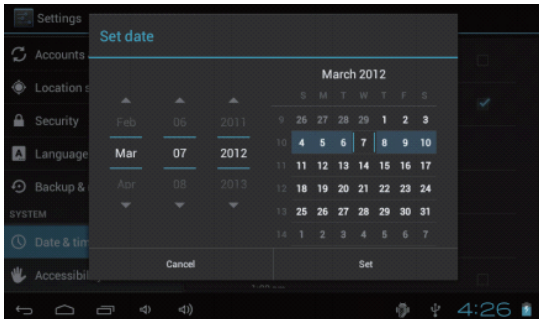


Choose+: It means increase of 1 unit;

Select-: It means it reduces 1 unit;


You can also choose the number to enter the input pattern. Directly input the number, and then select the button done, as shown below:

## 5.File Manager

 
Copy the APK software program that will be installed to Micro SD card or NAND FLASH.

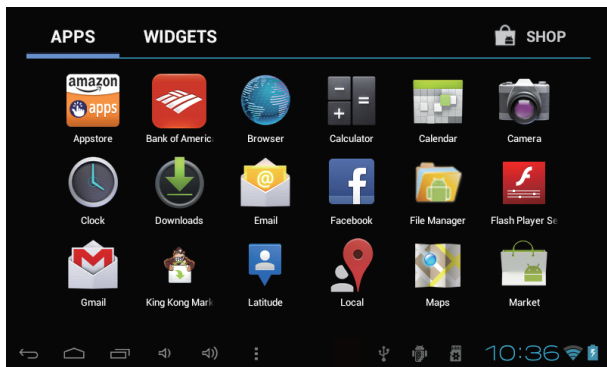

 
The first time to enter the program installation, the system defaults NAND Flash as the search directory .

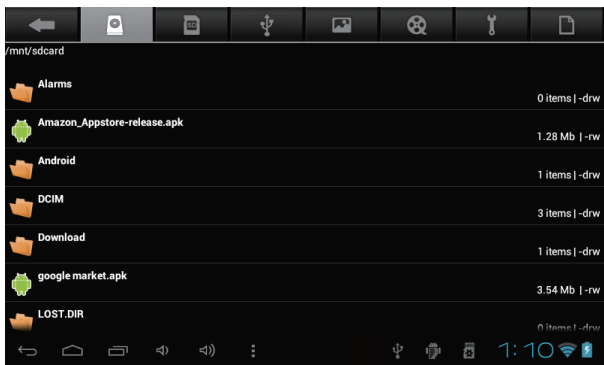

 If your APK setup application is on Micro SD card. The system will automatically search the directory from Micro SD Card .

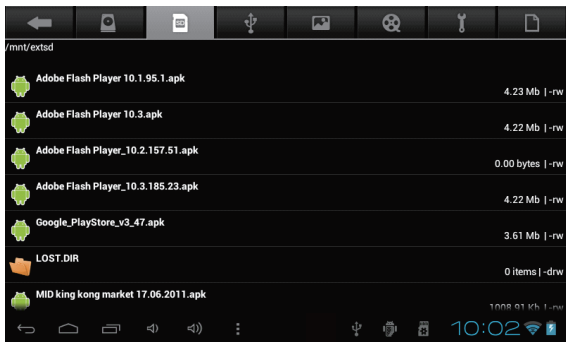

Install the searched application

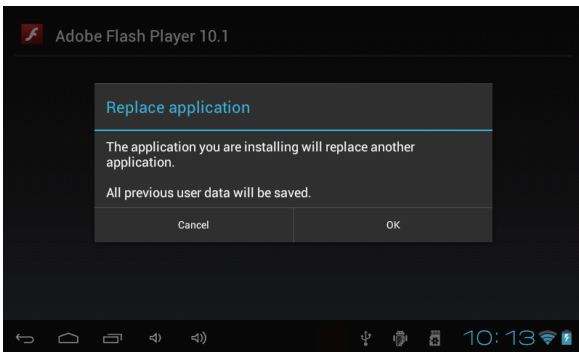 

The user can do on-line installation through "market", or download and install by the computer, or through a built-in browser download and install online.

\*Uninstall the application: You can use the third party software management tools or use the built-in Android application management software.


Select "Settings"/"application"/"management application", and select the corresponding installed applications to check the program.

## 6. Network

 
### Webpage browsing:

When the network is connected, open the webpage browser and enter the URL, you can browse.



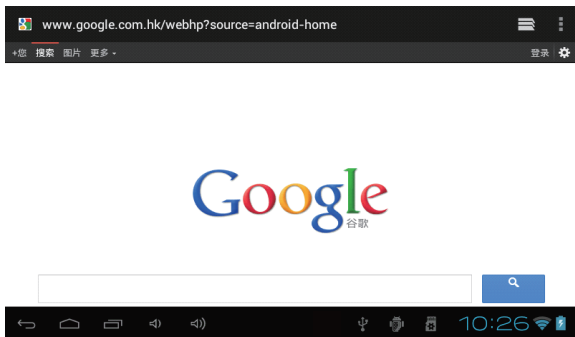

 Webpage can be free scaled by the scaling controller,as shown below:

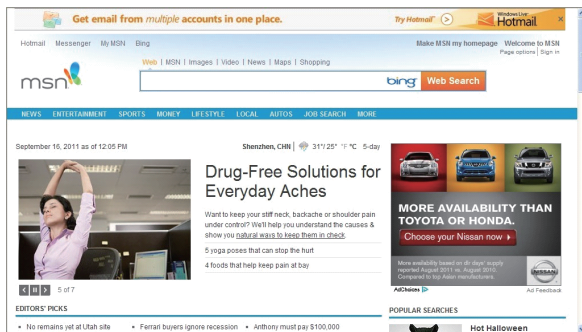


Online video:

Users can use the "market" or other ways to download online video player software, online TV player software, online music software, and then install in the machine. To open the installed software, you can watch online video or online TV, and listen to online radio.


## 7.Music playback

 Click on the "music" icon in the main menu, and then enter the music player interface. The default list system in the user data area for all audio files is shown as below:

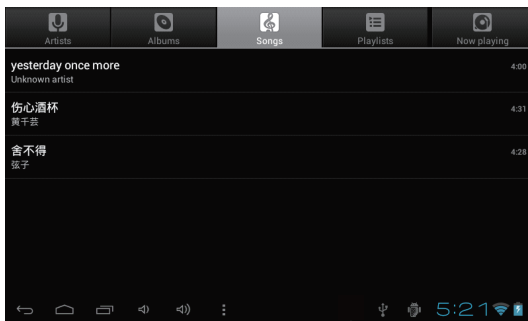


You can use synchronous USB to input audio file, or by inserting a Micro SD card with audio file to input audio files. You can also use the network to download the audio file.

 Select the corresponding tag, and check the interface as "artists", "album", and "song" and so on to play the song.

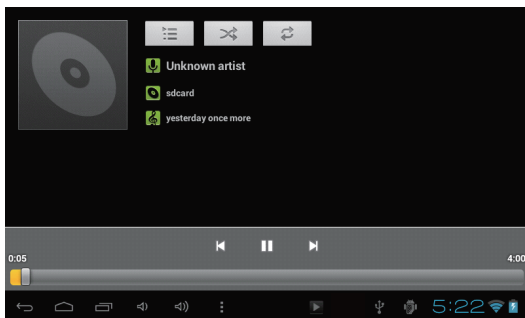


## 8.Video playback:

 Click on the "Video player" in the main menu,to enter the "Super-HD player" main interface. It lists all video files and image files as shown below:

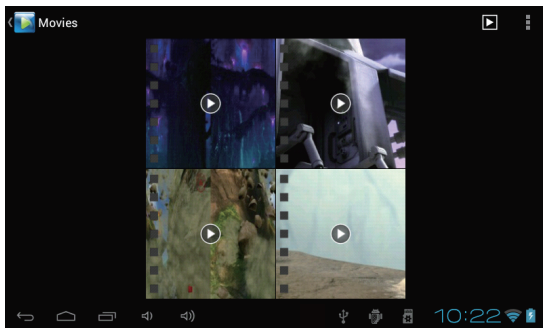


 Select the video file and enter the video playing interface,as shown below. Select "play", "stop", "fast forward", "rewind", "progress" and other control keys to control the playback schedule.

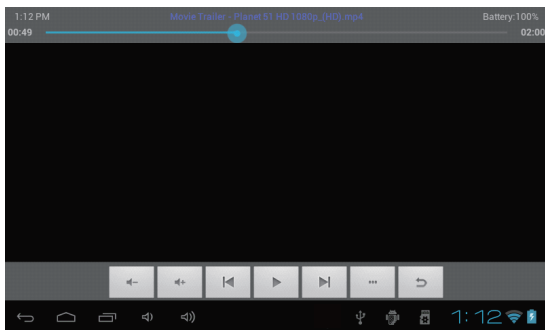


## 9. Photo browse

 Click on the main menu "Super-HD player" to enter the "Super-HD player" interface. It lists all the picture files and video files as shown below:

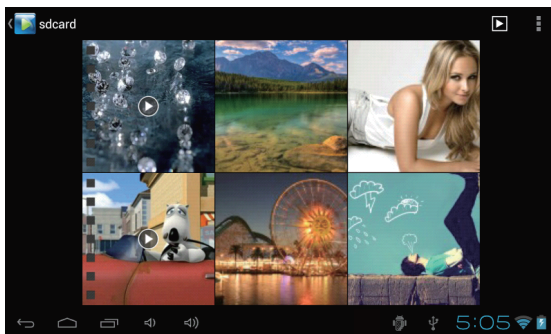


Select a picture file; enter the picture play interface, as shown below. Select "zoom", "narrow", "set" and "delete" operation.

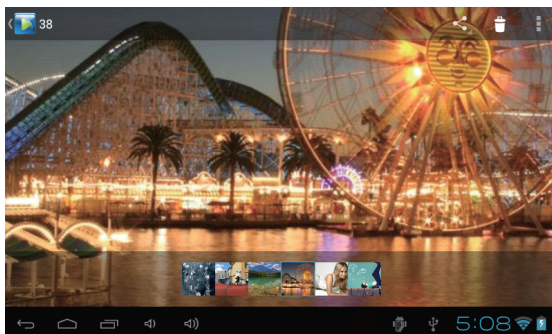 

## 10. Wallpaper

The system supports static wallpaper, and 3D wallpaper.

 In the desktop interface, press down the Menu key for pop-up menu options, select "wallpaper" and "choose the wallpaper source" selection box:

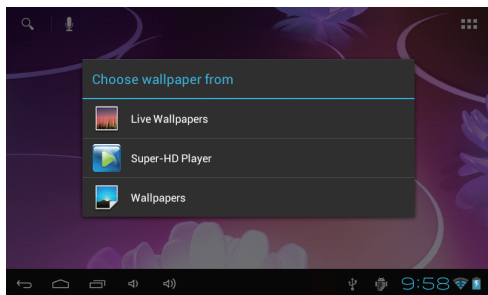


There are the following options:

Select "wallpaper" to customize wallpaper.

Select the "live wallpaper" to use the system-supplied 3D wallpaper.

Select the "super-HD player" to choose a picture supplied by the system as the static wallpaper.

 Or press on the screen and dialog box for the following to pop:

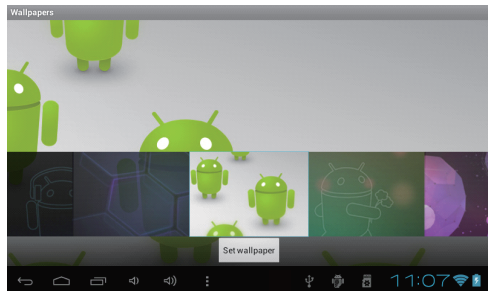


---

## 11. Record

 ---

Click on the "sound recorder" icon in the main menu and enter the "sound recorder" main interface as shown below:

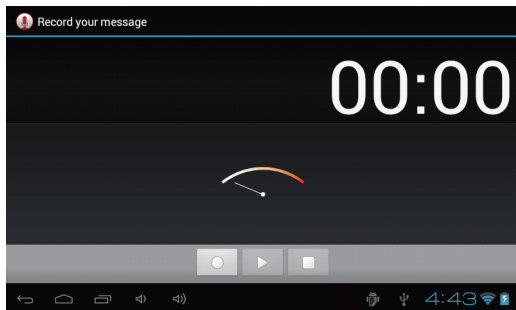


Select the "recording" button to record and after recording is completed press "stop" button. At this time you can select the "play" button to play the recorded sound. Select "Use this recording" button to save the recording, so that you can find the corresponding audio files in "NAND"; if you do not need to save, you can select the "give up" button.

---


## 12. Photograph

 ---

Click on the "camera" icon in the main menu and enter the "camera" main interface as shown below:

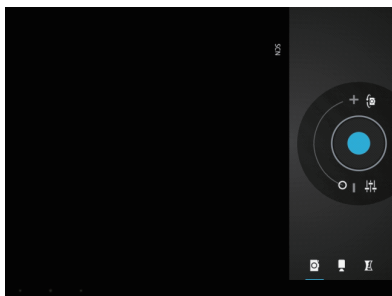


Click on shutter in the camera.

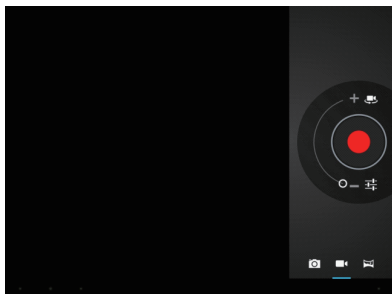 

## 13. E-mail

 Click on the “e-mail” icon in the main menu to enter email client . Allocation of account information will be required the first time. As shown below:

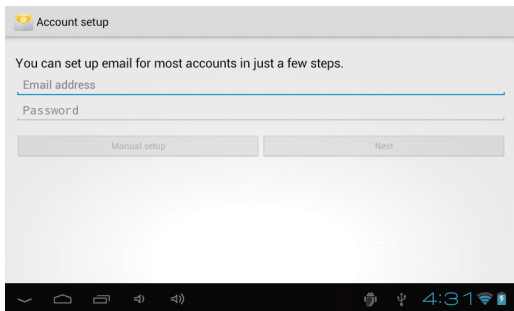

1. Click the email icon, then it will appear in the mailbox setup guide to help you to set.
2. Click the next step button.
3. Enter your email account address and password.
4. Click the next step button, and select your mailbox type: POP3 or IMAP.
5. Then click next step button to check whether email server is available.
6. Input account name and to display the name, then click completion.
7. If the mail is available, it will automatically enter your inbox.

## 14. Keyboard and mouse

---

CyberPad supports plug and play USB mouse and keyboard device.



---

## Features

---

- Screen: 10" TFT Capacitive Touch Screen, 4:3 LCD (1024 x 768)
- Processor: Cortex A8, 1.2GHz
- GPU: Mali 400MP
- OS: Android 4.0 Ice Cream Sandwich
- RAM: 1GB DDR3
- Memory: 8GB (Support up to 32GB)
- Wireless Connection: WIFI 802.11b/g
- Support 3G Module USB Dongle
- Support Flash 11.1
- Support Dual Camera 0.3MP (Front), 2MP (Back)
- Mini USB Port / Card Reader (Max: 32GB)
- Support 1080P HD video
- Support Mini HDMI Output
- Audio Output: Stereo Speaker (8Ω1.0w) / 3.5MM Stereo Headphone Jack
- King Kong Market, Internet Browser, Office, Calendar, Calculator, E-mail
- Picture Viewing, Music / Video Playback, Ebook, Games
- Battery: Built in 6500mAh / 3.7V

## Basic Warranty Statement

This product is warranted to the original purchaser ONLY, to be free from defects in materials and workmanship under normal use, for ninety (90) DAYS (parts and labor) and **one (1) YEAR** (parts only) from the date of original purchase. We agree under the warranty period to replace product if it is determined to be defective at "No Charge". This limited warranty does not cover any loss or damages that occur as result of:

- Cosmetic damage.
- Shipping or improper installation or maintenance.
- Misuse.
- Neglect.
- Any cause other than ordinary commercial or industrial application.
- Adjustment by non-authorized source or any of the products firmware or hardware that you or any third party have modified or altered
- Improper environment
- Excessive or inadequate heating or air conditioning or electrical power failures, surges, connection to improper voltage supply or settings or other irregularities.
- Accidents, acts of God.

In the United States and Canada contact Customer Service at (909) 627 - 9888.

**\* Please note that in order to have your merchandise repaired and replaced by warranty, you must contact our customer service representatives by phone or email, and get RMA number**

To obtain factory service, the original purchaser MUST present the following:

1. A sales receipt/proof of purchase indicating date of purchase
2. Your Name, Place of Purchase, Address, UnitModel, and Description of Problem.
3. Send the unit pre-paid to the address below in the original packaging or reasonable substitute to prevent damage. **No return will be shipped back to a PO BOX.**
4. All of the accessories that came with the product package must be sent along with the main unit.
5. Please include your check or money order in the amount of **\$20.00** to cover handling and return shipping charges. We will not be responsible for delays or unprocessed claims resulting from purchaser's failure to provide any or all of the necessary information.
6. There is Additional Shipping Charge for areas outside of United States. For shipping charge please consult with our customer service.



***Please review your user  
guide carefully before  
using this product.***

*If you need further assistance  
please contact us at:*

**(909) 627 - 9888**

*Additional troubleshooting information  
can also be found on the web at:*

***[www.iviewus.com](http://www.iviewus.com) and click on “Support”  
or email us at [support@iviewus.com](mailto:support@iviewus.com)***